




FC-B QUICK START GUIDE

Here are 4 easy steps to get you started

BATTERY INSTALLATION

①


Turn to remove the battery cap and insert one AA battery with positive facing outward. Secure the battery cap tightly.

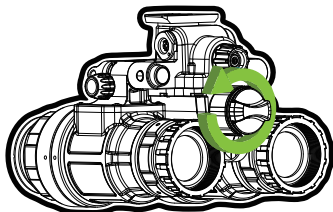

POWER ON/OFF

②


Press the power button to turn the unit on. Press and hold for 3 seconds to turn off.

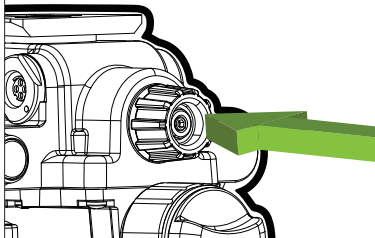

FOCUSING OBJECTIVE LENS

③


Attach the unit to your helmet and rotate both objective lenses clockwise until they stop. The focus is now set at infinity.

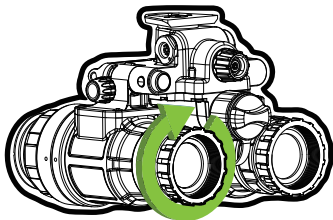

FOCUSING DIOPTER

④

Look at an object that is far away. Rotate the diopters individually until the image is focused to your eye.

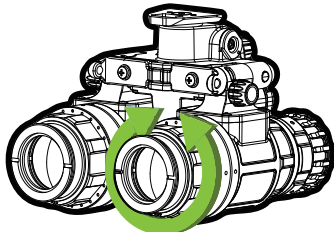

****NOTE**** Now that you have properly focused your diopter, you can adjust the objective lens to focus on objects that are near or far depending on your environment.



GAIN ADJUSTMENT



If gain is enabled, rotate the power button to adjust brightness.

AUTO OFF FUNCTION

When the function is enabled, the BNVD will automatically power off after 2 minutes of inactivity to prevent tube damage.


It will also temporarily power tubes off if flipped vertically past 90 degrees, and will power back on when flipped back down.

To activate or deactivate the auto off capability, press the power button five times. The right light pipe will flash 5 times indicating 5 button presses. A short 5th flash will indicate the function is disabled, and a long 5th flash will indicate the function is enabled.

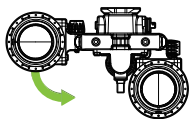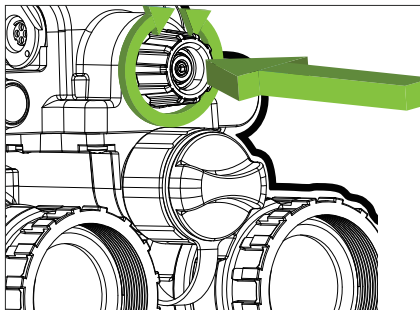


IR ILLUMINATOR

While the unit is on, double tap the power button to toggle the IR illuminator on/off. The left light pipe will show red to indicate the illuminator is active.

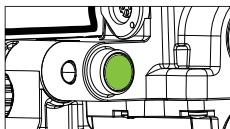

SETTING IP STOP

Rotate the knob outward a 1/4 turn. Articulate the pod down to align with your eye for a clear picture. Turn the interpupillary(IP) stop until there is resistance.

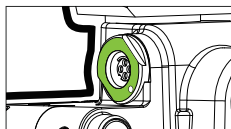

BATTERY PORT

Pull the port cover off to reveal the battery port. Align the white dot when plugging in the Fischer Cable.

TIPS AND TRICKS

- Utilize protective lenses (sold separately) if using for force on force training.
- Use only microfiber cloths or lens brushes to clean lenses.
- When not in use, unscrew the battery cap a quarter turn to disconnect battery power.
- Avoid prolonged exposure to bright lights.

